





MOTORCYCLE ALARMED DISC-LOCK BATTERY REPLACEMENT

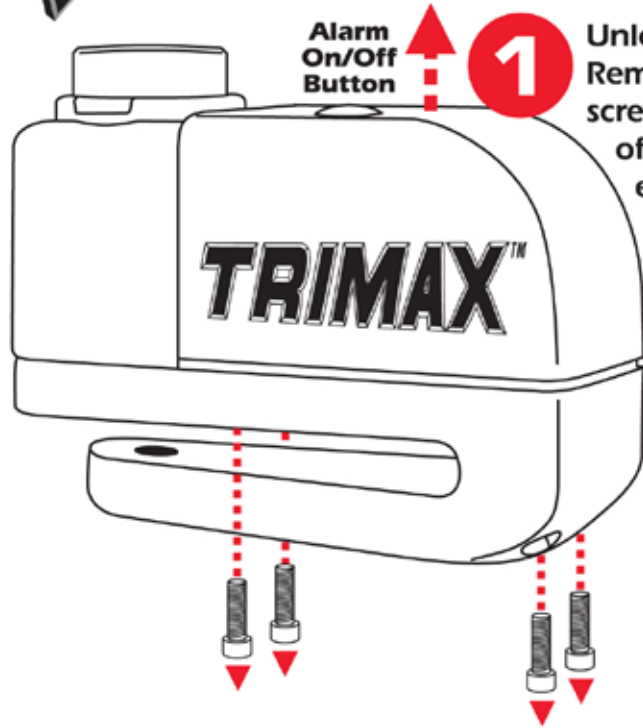

Alarm
On/Off
Button

1

Unlock alarm disc-lock. Remove 4 hex head screws from bottom of lock body using enclosed wrench and lift off vinyl covering.

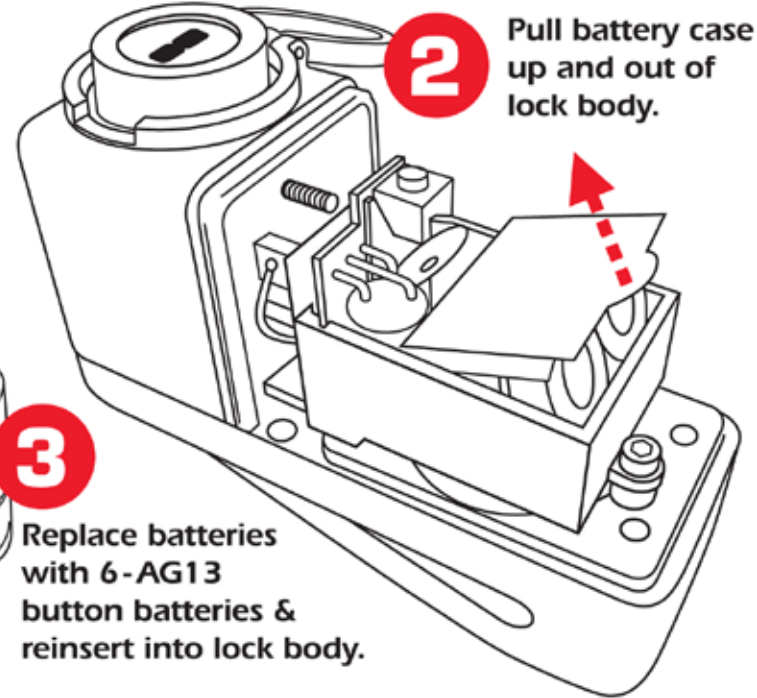

2

Pull battery case up and out of lock body.



3

Replace batteries with 6-AG13 button batteries & reinsert into lock body.

MODEL # Call: 866-796-8500
TAL7PB With Questions.

NOTE: BE SURE TO RECORD YOUR KEY NUMBER FOR REPLACEMENT IF LOST. LUBRICATE LOCK PERIODICALLY.

▶ Disc Lock can be used with or without the alarm. Arm lock by pushing down lock head and pressing the button next to it.

TRIMAX™ IS A DIVISION OF: **WYERS™**
Products Group, Inc.

P.O. Box 4161 • Englewood, CO 80155-4161
See our complete line: www.trimaxlocks.com