

OPERATION INSTRUCTIONS

Warning: Do Not Use On Loaded Guns!

To open the lock:

The lock is preset at 0-0-0. (Even though dials may appear in other numbers).

1. Turn the dials to the preset combination and align the numbers to the Guide Line.
2. Push the Unlock Button and pull the lock apart.

To reset combination

1. Open the lock
2. Push the reset button in all the way with a pen (or other) while turning the dials to desired combination.
(Do not let go of the button while setting the dials).
4. Release the Reset Button after changing to your own combination.
The lock now is ready to open with new combination.

To Lock:

1. Make sure the safety is in the SAFE position.
2. Caution: Check the gun is not loaded or cocked.
NEVER use the lock on a loaded gun.
3. Put front (the part with the dials) on one side of the trigger against the trigger guard.
Check the best locking position before completeing the next step.
4. Place the back part onto the opposite side and insert it into the front part.
5. Press two parts tightly together and turn dials.

